Contoured Body-Specific Massage Technology

FULL BOOK

< 0.K. ►

LEG/FOOT to (/)

AIR HEAT FF 2

Using "Full Body" mode - for ultimate tension relief

While in "Full Body" Mode, select one of four programs: Quick (8 min.), Deep, Relax or Refresh.

Once selected, the unit will automatically recline to the correct massage position. Pressure points in the upper neck, middle & lower shoulder are stimulated providing relief to the entire body.

"Selected Area"

Target Problem Areas by choosing Neck & Shoulder or Lower Back Focus.


Customize by selecting:

- Leg/Foot Massage Option
- Airbag Intensity
- Heat Option




Deep

Focuses on deep tissue massage for neck and shoulder stiffness, and lower back fatigue. The massager will knead the neck and shoulder area upwards and downwards, and roll the entire body.



Relax

For a gentle tension-releasing massage for full body fatigue, the massager will focus on kneading and stretching the back muscles to gently relax the entire body.

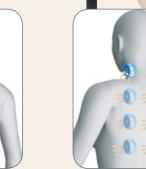

Refresh

'Refresh' mode provides a rhythmical massage for neck, shoulder and lower back stiffness – the massager will focus on tapping to the entire body.

Quick Mode

For a quick tension-releasing massage during a short break. Based on the "DEEP" program, the massager will concentrate on kneading and loosening the points where stiffness and fatigue are easily felt in an abbreviated 8-minute program.

"Manual" Massage

Choose from several Manual Massage Options including: NECK ROLL, NECK KNEAD, KNEAD, TAP & BACK ROLL.

Comfort Control Adjustment






The new slide recline system is very compact. The legs also extend as much as 10 cm to accomodate taller frames.

EP-MA03 Specifications

	Power Supply		AC 120V, 60Hz
	Power Consumption		105W
	Electric Heater	r Power Consumption	23W
	Upper Body Massage	Massage Area (up-down)	Approx. 64 cm (The massage heads move a total of approx. 58 cm)
		Massage Area (left-right)	Distance between massage heads during operation Neck, shoulder, back, lower back: Approx. 4 - 15 cm
		Massage Area (forward-back)	Protrusion of massage head: Approx. 6 cm
		Massage Speed	Tap: Approx. 285 - 495 cycles/minute (single side) Knead: Approx. 7 - 25 cycles/minute Movement Speed: Approx. 2 - 4.5 cm/s
		Massage Width	Same as massage area (left-right)
1877 - N. S.	Air Massage	Air Pressure	3: Approx. 32 kPa 2: Approx. 28 kPa 1: Approx. 20 kPa
	Automatic Shu	t-off	Automatically turns off after a maximum of 15 minutes
1			
	Dimensions (H x W x D)	When not reclined	Approx. 105 x 78 x 150 cm
		When reclined	Approx. 82 x 78 x 176 cm
No.	Weight of Unit		Approx. 63 kg
	Maximum User Weight Pre-set Programs		Approx. 120 kg
			Full Body, Deep, Refresh, Relax, Quick (8 min.), Selected Area (Neck/Shoulder, Lower Back, Leg/Foot)

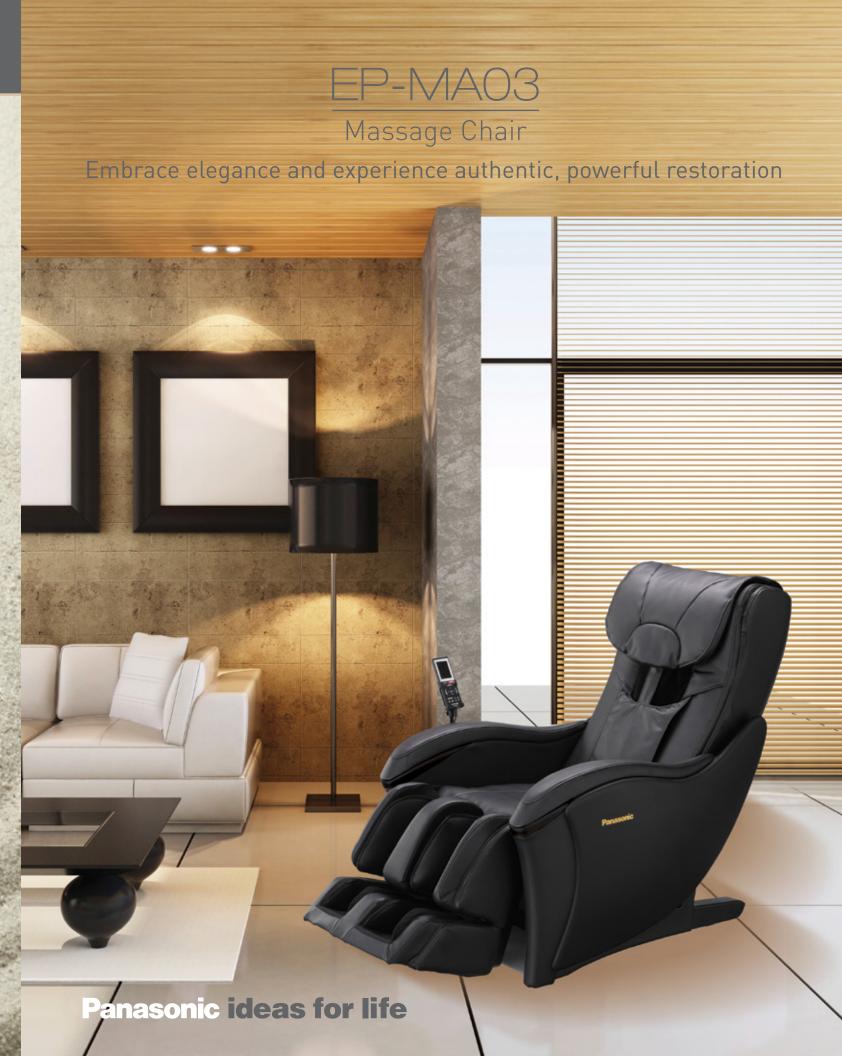

Panasonic ideas for life

2012-12-EN

Design and specifications subject to change without notice.

Panasonic's EP-MA03 Massage Chair

EP-MA03 Benefits • Relieves sore muscles increased energy flow Temporarily increases ADVANCED The latest luxury massage chair from the leader in massage replication technology for over 40 years. MASSAGE TECHNOLOGY


The EP-MA03 is designed to help achieve therapeutic muscle relaxation and increased blood flow throughout the body to promote good health. Inspired by centuries-old Chinese massage techniques, the EP-MA03 features a revolutionary, **cervical spine massage mechanism** that allows greater focus on the pressure points in the neck and back—the key to relieving overall tension and stress.

SINCE


Enjoy therapeutic full body massage with heated foot technology – in the comfort of your home.

Neck Massage



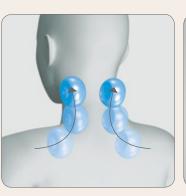




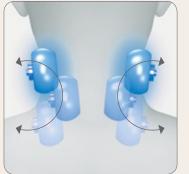

The EP-MA03 features 4 massage balls replicating the hands of a massage therapist – soothing pressure is accurately applied up and down the sides of the neck and spine, to provide relief in the most common areas prone to stiffness and accumulated tension.

Shoulder & Back Massage

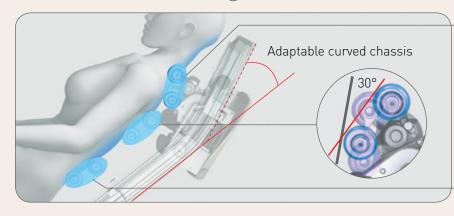

The 4 floating style massage balls press into the upper part of the back and shoulders - easing stiff necks and aching shoulders.


The massage balls also move along the entire lumbar curve to massage the cervical spine and waist with a rolling motion, while effectively stretching the lower back.

Contoured Body-Specific Massage

The EP-MA03 delivers a gentle massage specifically contoured to suit each user's unique structure. The human body has approximately 350 acupoints, with nearly 100 in the back and neck. From the soothing palm style of Swedish massage, to deep tissue kneading, to Shiatsu massage, the Panasonic EP-MA03 has a variety of techniques to target acupoints, resulting in invigorating energy.





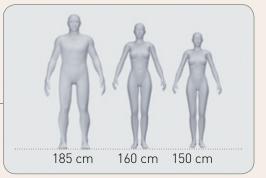

Designed to accomodate a variety of users.

Effective Massage Techniques

For over four decades Panasonic has continued to achieve their goal in developing the latest technology in luxury massage, designed specifically to help achieve therapeutic muscle relaxation and overall health.




Foot & Calve Massage


The EP-MA03 features an airbag circulation system for a more complete, contoured lower body massage including: Calves, a kneading and loosening of the shins as well as both the side and back of the calf muscles. Feet, an upward pressure is applied using four airbags for ultimate relief.







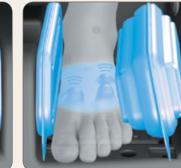

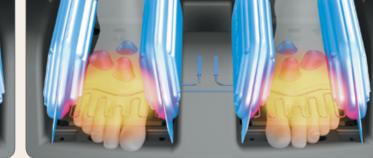

Alternating foot massage with air cushions for a realistic and soothing massage experience.

the soothing pressure of shiatsu nodules to manipulate and loosen tense, aching feet.

The EP-MA03 heats up soles to alleviate stiffness, using

Photos and diagrams are for illustration purposes only.